

# How to Configure Wireless Keypad in AX PRO Wireless Control Panel

Title:	How to Configure Wireless Keypad in AX PRO	Version:	v1.0	Date:	12/08/2020
	Wireless Control Panel				
Product:	DS-PWA Series AX PRO Wireless Security Control Panel			Page:	1 of 2

#### Preparation

- 1. DS-PWA Series AX PRO Wireless Security Control Panel
- 2. Wireless Keypad DS-PK1-E-WE
- 3. IE explorer and App Hik-Connect

## How to Configure Wireless Keypad in AX PRO Wireless Control Panel

The Wireless keypad is used to Arm/Disarm the AX PRO Panel.

### 1. Add the Wireless Keypad to AX PRO

- 1) You can set the parameters of the keypad that is enrolled to the AX PRO
- 2) In the site, tap the AX PRO and then log in to the device.
- 3) Select Device---Keypad----Keypad management, click +Enroll
- Enter serial number and click save, during add Enrolling process, Power ON Keypad, when the Green light flash 7 times means add success



5) Tap Edit Icon the keypad configuration

nfiguration		×
Function Buttons		/
Linked Area	Active Functions	
	✓ Area 1	
		- 1
		- 1
Arming Without Decouverd		- 1
Arming Without Password		
Buzzer		- 1
Backlight Off Time	00:00 📸 to 00:00 🔂 🛛 Backlight	-
Silent Panic Alarm		-
Silent Medical Alarm		- 1
Polling Rate	5min -	- 1
Enroll Wireless Keypad		- 1
		. 1

**Function Button:** If disabled, Keypad Fire Alarm, Panic Alarm, medical Alarm function will not be working



Arming Without Password: You can press the arm button directly, arm without password (Disarm need password)

#### 2. How to Configure Keypad Password

#### User---User Management---Add or Edit user

- 1) **Edit Keypad Password:** If the target user is an administrator, an installer or an operator, you can tap the target user on the user list and then tap Edit Keypad Password to set the keypad password to the target user.
- 2) Edit Duress Password: If the target user is an administrator or an operator, you can tap the target user on the user list and then tap Edit Duress Password to set the duress password to the target user.

**Note:** Password is link to the user, so if user Deleted or Hik-Connect delete the Panel, the user's password will be invalid.

HIKVISION				
Qverview	User Management	Edit User		×
A User	+ Add	User Information		
System	V8sa8y_hc User Type: A	User Type	Administrator -	
Area	Keyfob: Tag:	User Name	v8sa8y_hc	
🚔 Communication	User Permi I	Keypad Password		
Maintenance		Duress Code		
		Keyfob		
		Tag		
		User Permission	<ul> <li>Select All</li> </ul>	
			Permission for Log and Status Quer	
			Zone Bypass	
			Arm Permission	~

# 3. Wireless Keypad Command

A/D	Fault	Alarm	Signal	
1		2	3	
4		5	6	
7		8 9		
*		0	#	
Stay	Away	Disarm	Output	

1	-		
	$\mathbb{A}$	all 🖄	ä
	1≙	21	30
	4	5	6
	7	8	9
	*	0	#
	<u>ل</u>	Ût û	-iĝi-
		HIKVISION	

Events	Codes		
Away arm	password+short press away		
Stay arm	password+short press stay		
Disarm	password+short press disarm		
Choose partition away	password+ # +partitions (1,2.3.4.5.6.7.8.9.010.011.012)+away		
Choose partition stay	password+ # +partitions (1,2,3.4.5.6.7.8.9.010.011.012)+stay		
Choose partition disarm	password+ # +partitions (1,2,3.4.5.6.7.8.9.010.011.012)+disarm		
Clear alarm	password+long press disarm		
Fire	3s press 1		
PA	3s press 2		
Medical	3s press 3		
Output	password+output+relay number+ #		

## 4. Wireless Keypad Reset

- 1) Open lid
- 2) Hold the tamper-proof button for 8 seconds(meanwhile turn on the power switch)
- 3) Formatting completes when the indicator flashes red for 3 times





